

installing the eyebolt a

Locate ceiling joist (by Stud Finder or tapping and verifying with a small nail). Be sure to locate exact center. Using a 3/16" (3mm) wood drill bit, drill a hole (approximately 4" (10cm) deep) perpendicular to the ceiling. Screw in the supplied eyelag / hook assembly until all threads have disappeared into the joist. Do not loosen or adjust once in place.

important:

Hole must be directly in the center of the stud for maximum weight bearing capacity. Failure to do so could cause eyebolt to loosen. Spinning or swinging in the chair will loosen the eyebolt and may result in injury.

hanging the outback recliner

Hang the "O" ring of the chair into the pre-installed eyelag / hook assembly.

important:

Your safe relaxation depends upon how and where you hang the outback recliner. The outback recliner has a rated load 350 lbs.



adjusting your chair

Fine tuning of your chair is possible for maximum comfort.

Raise or lower the chair height at the "O" Ring, using the chain provided. We suggest that the bottom of the chair should be approximately 24" (60cm) from the floor / ground, or where your knees are bent comfortably below you.

NOTE: the first time you sit in your outback recliner it will stretch.

to fit cup holder

Simply loop cup holder through overhead webbing and pull through over overhead dowel. Position where suitable.

washing and care instructions

Using soft brush and warm soapy water, scrub where necessary. Allow to dry on a flat surface or by hanging.

warning:

Not suitable for washing machine, tumble dryers, or chemical bleaches.

important reminders


The eyelag / hook assembly must be screwed into a pre-drilled 3/16" (3mm) hole. Failure to adhere to this could result in injury. The outback recliner is made for strength and durability. The outback recliner can withstand long periods of exposure to the sun (though it is preferable to hang it in the shade) we recommend you store the chair when not in use for extended periods. Spinning or swinging in the chair are not recommended.

about your warranty

The Outback Chair Company has manufactured products of the finest quality since 1973. We know that you will have many years of comfort from your outback recliner. Your chair has a 10 year factory warranty against faulty workmanship or weak materials.

disclaimer

Please note: Outback Chair Co Inc and all agents or representatives there of cannot assume responsibility for special, indirect, or consequential damages or contingent liability for use of this product in a manner not expressly intended by the manufacturer. End consumer is ultimately responsible for verifying proper installation of the eyelag /hook assembly according to our guidelines explained here within.

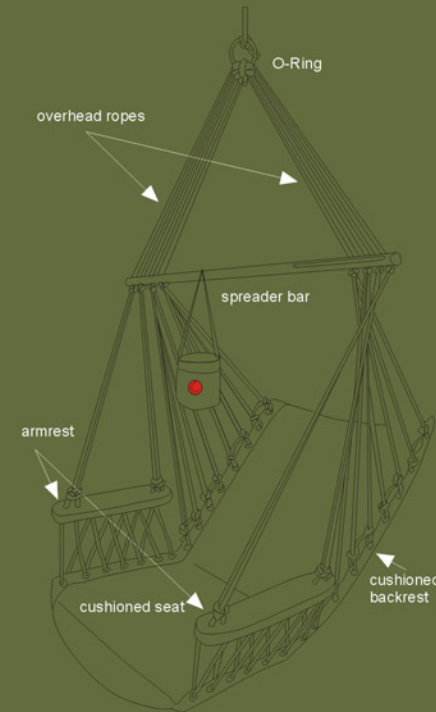

outbackrecliner
to air is human, to recline is divine



Optional frame: get the sturdy, free standing, steel frame & hang out anywhere.